

Fender Splash Shield

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the wheel and tire.
Refer to: [Wheel and Tire - Vehicles With: Dual Rear Wheels](#) (204-04A Wheels and Tires, Removal and Installation).
Refer to: [Wheel and Tire - Vehicles With: Single Rear Wheels](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the wheel and tire.
Refer to: [Front Fender Moulding - F-450/F-550](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).


For F250/350

3. **NOTE:** LH shown, RH similar.

If equipped with mud flaps.
Remove the mud flaps.

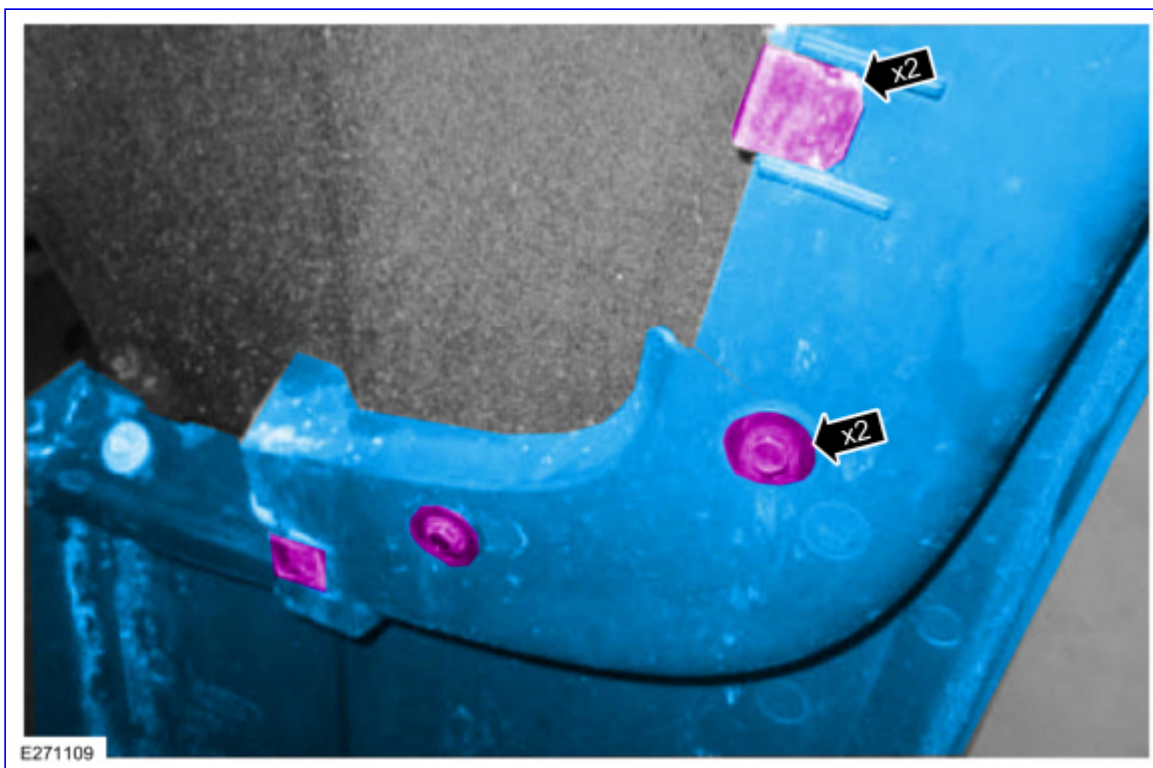


4. Remove the bolts.

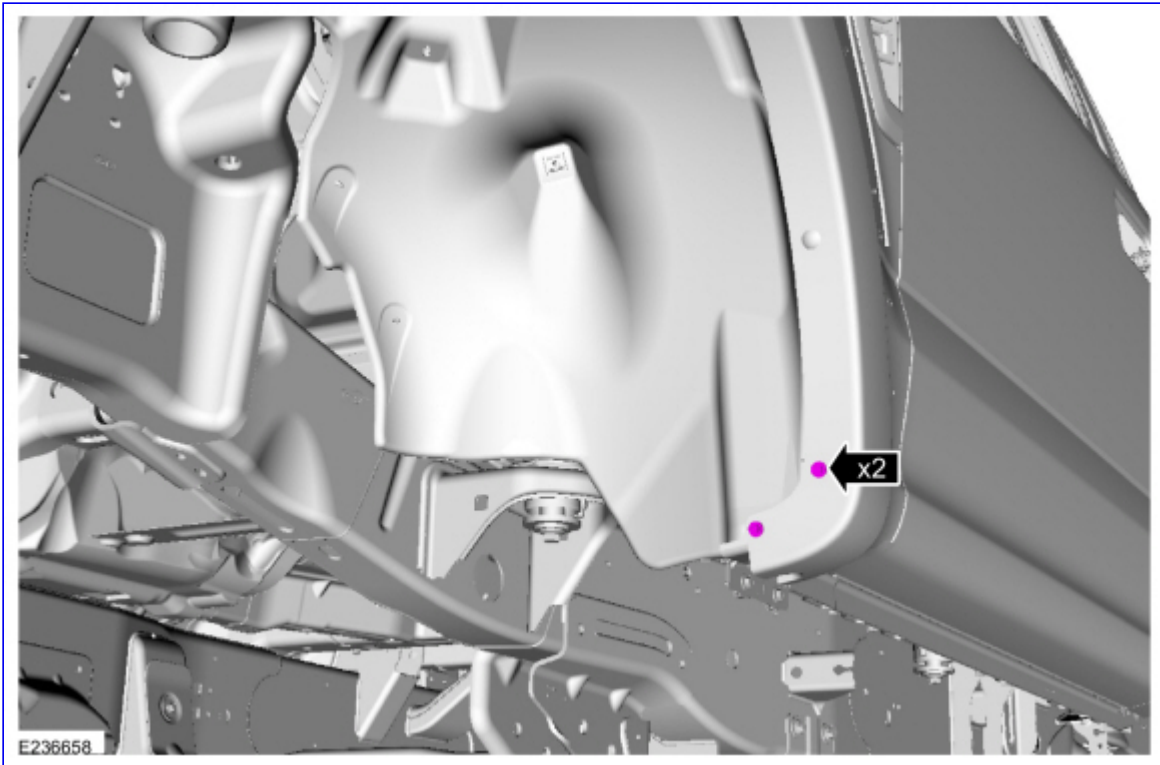

All vehicles

5. **NOTE:** *LH shown, RH similar*


Remove the bolt and the pin-type retainer.

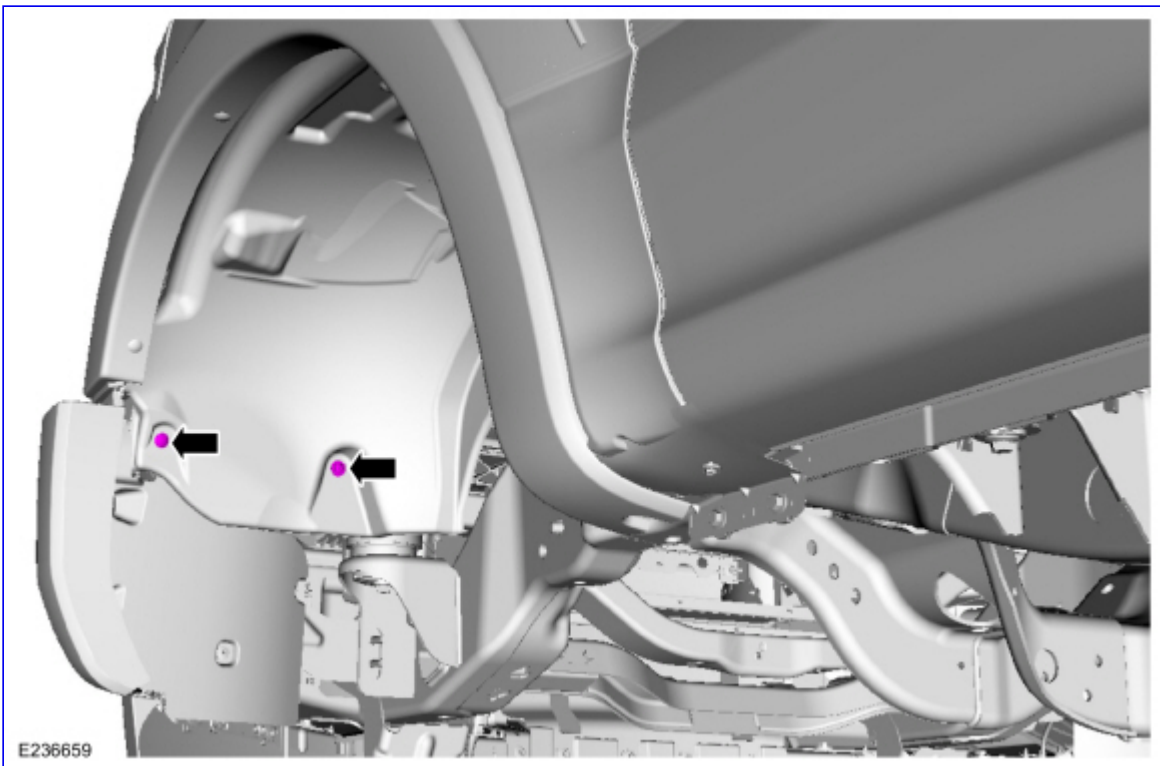


6. **NOTE:** *LH shown, RH similar*

Remove the bolts.



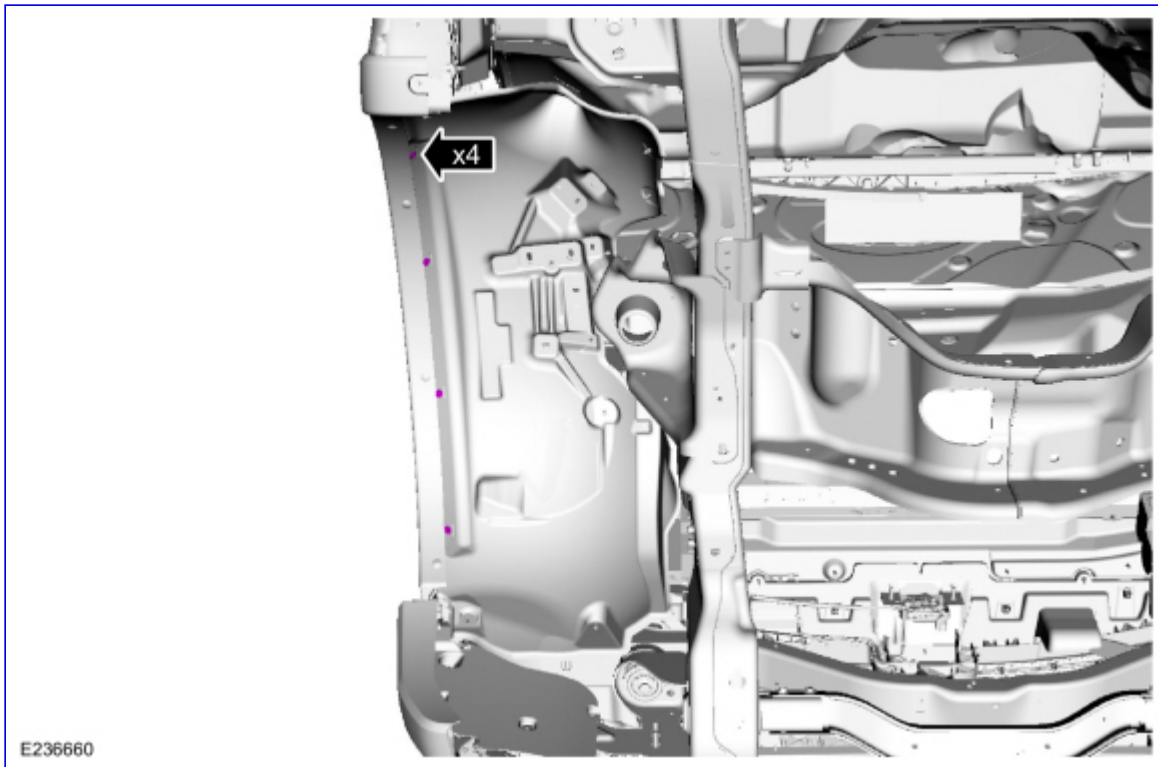


7. LH side.
Remove the bolts.

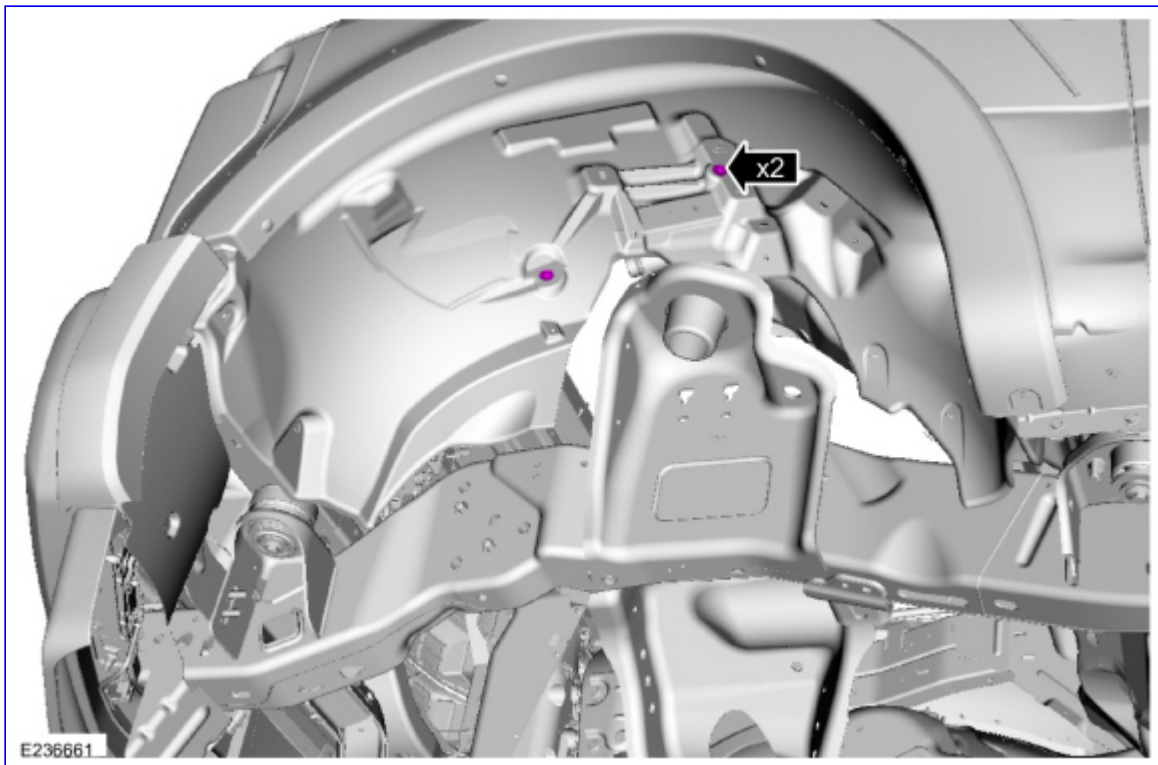


8. **NOTE:** LH shown, RH similar
Remove the nut.



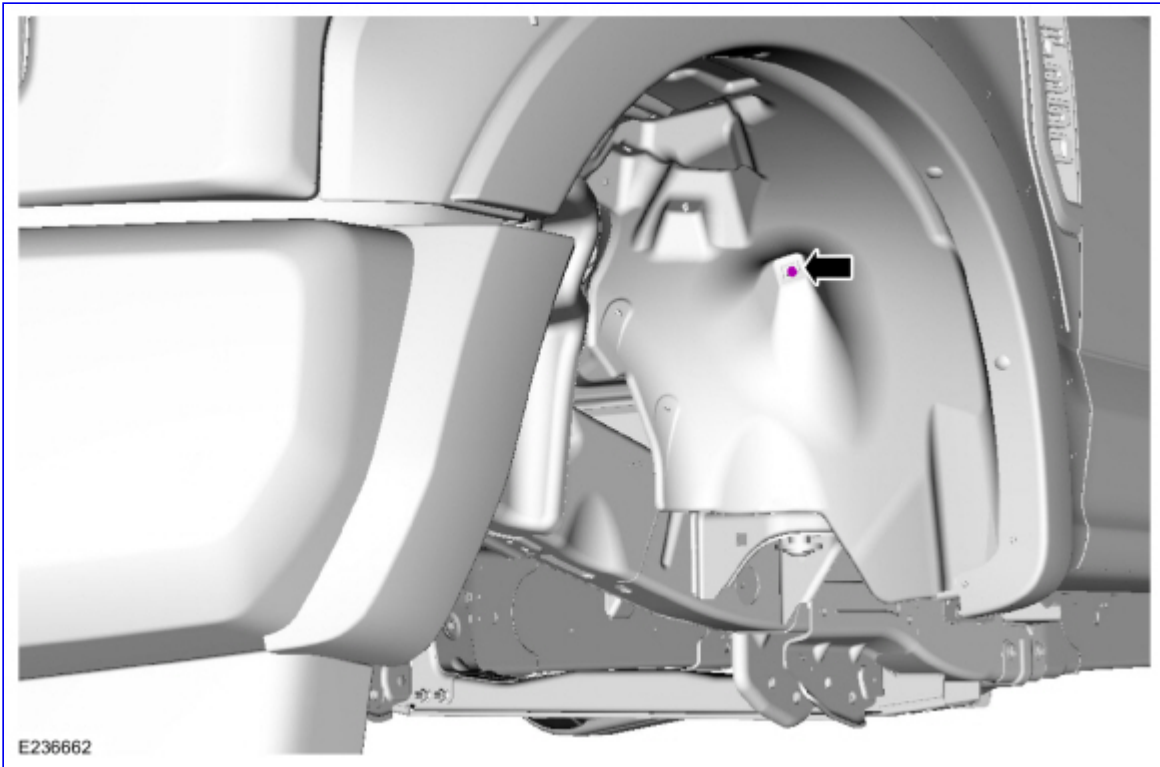


9. Release the wiring harness retainers and remove the LH fender splash shield.

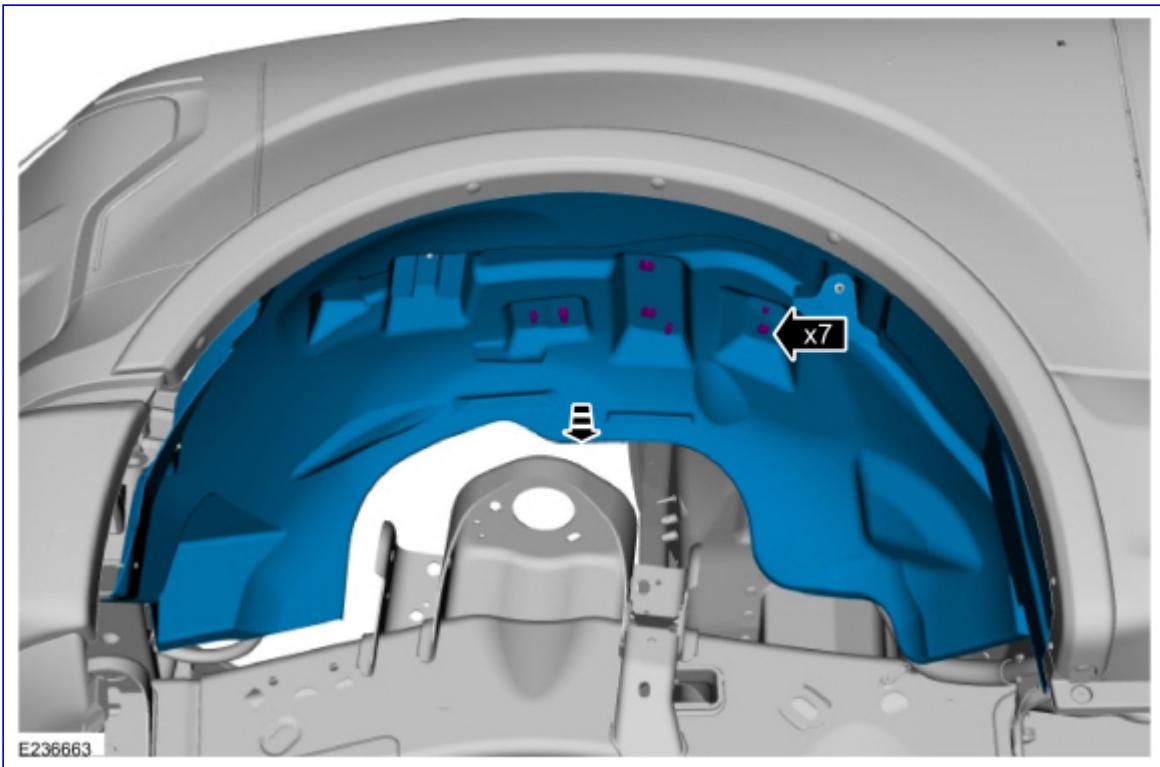

10. Remove the RH fender splash shield.



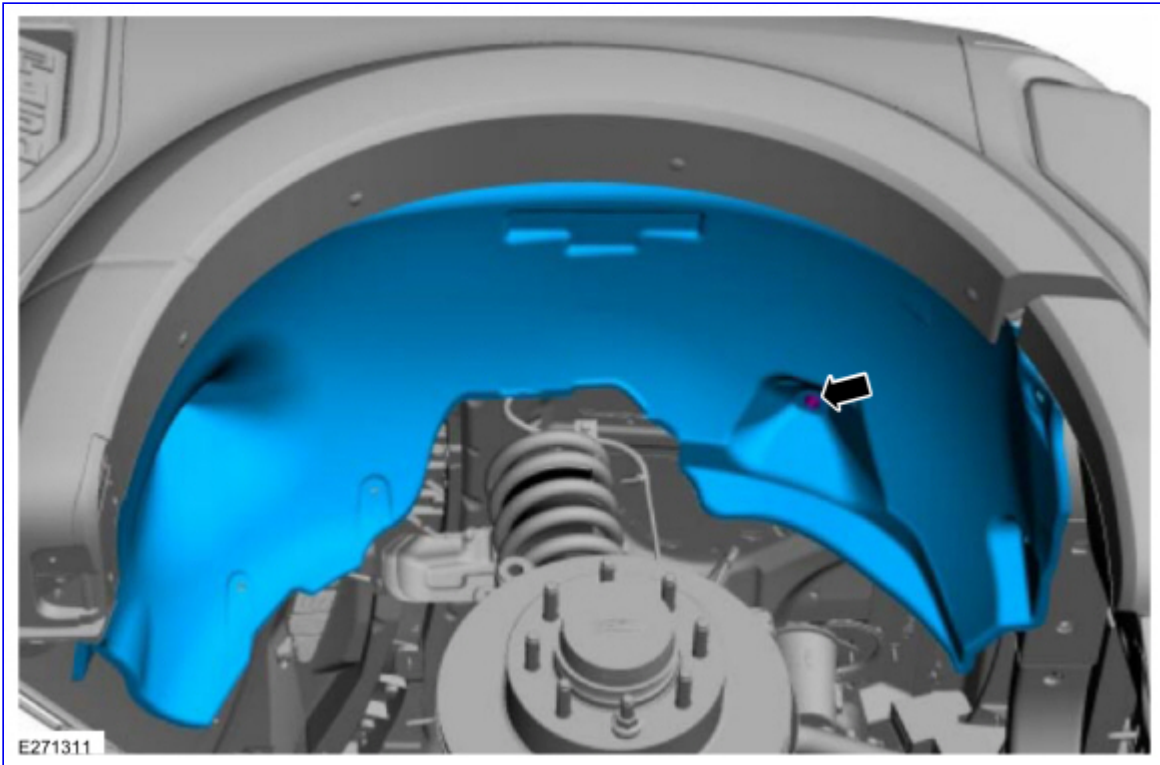

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

This publication contains material that is reproduced and distributed under a licence from Ford Motor Company. No further reproduction or distribution of the Ford Motor Company material is allowed without the express written permission of Ford Motor Company.

Copyright 2007 - 2019 Service Repair Solutions, Inc.