

1997 GMC Truck C 1500 Truck 2WD V8-5.7L VIN R

Vehicle &gt; ALL Diagnostic Trouble Codes ( DTC ) &gt; Testing and Inspection &gt; P Code Charts

10	Disconnect the EGR Valve electrical connector. Is the Actual EGR Valve Position at the specified value?	0%	Go to Step 17	Go to Step 11
11	Check for a short to voltage in the EGR Pintle Position circuit. Was a problem found?	—	Go to Step 12	Go to Step 36
12	Repair short to voltage in the EGR Pintle Position circuit. <a href="#">Refer to Wiring Repairs.</a> Is the action complete?	—	Go to Step 38	—
13	Check for a blown EGR Ignition Feed fuse. Was the EGR Ignition Feed fuse blown?	—	Go to Step 14	Go to Step 16
14	Replace EGR Ignition Feed fuse. Is the action complete?	—	Go to Step 15	—
15	Repair the short to ground in the EGR Ignition Feed circuit. <a href="#">Refer to Wiring Repairs.</a> Is the action complete?	—	Go to Step 38	—
16	Repair the open EGR Ignition Feed circuit. <a href="#">Refer to Wiring Repairs.</a> Is the action complete?	—	Go to Step 38	—