


TROUBLE DIAGNOSIS

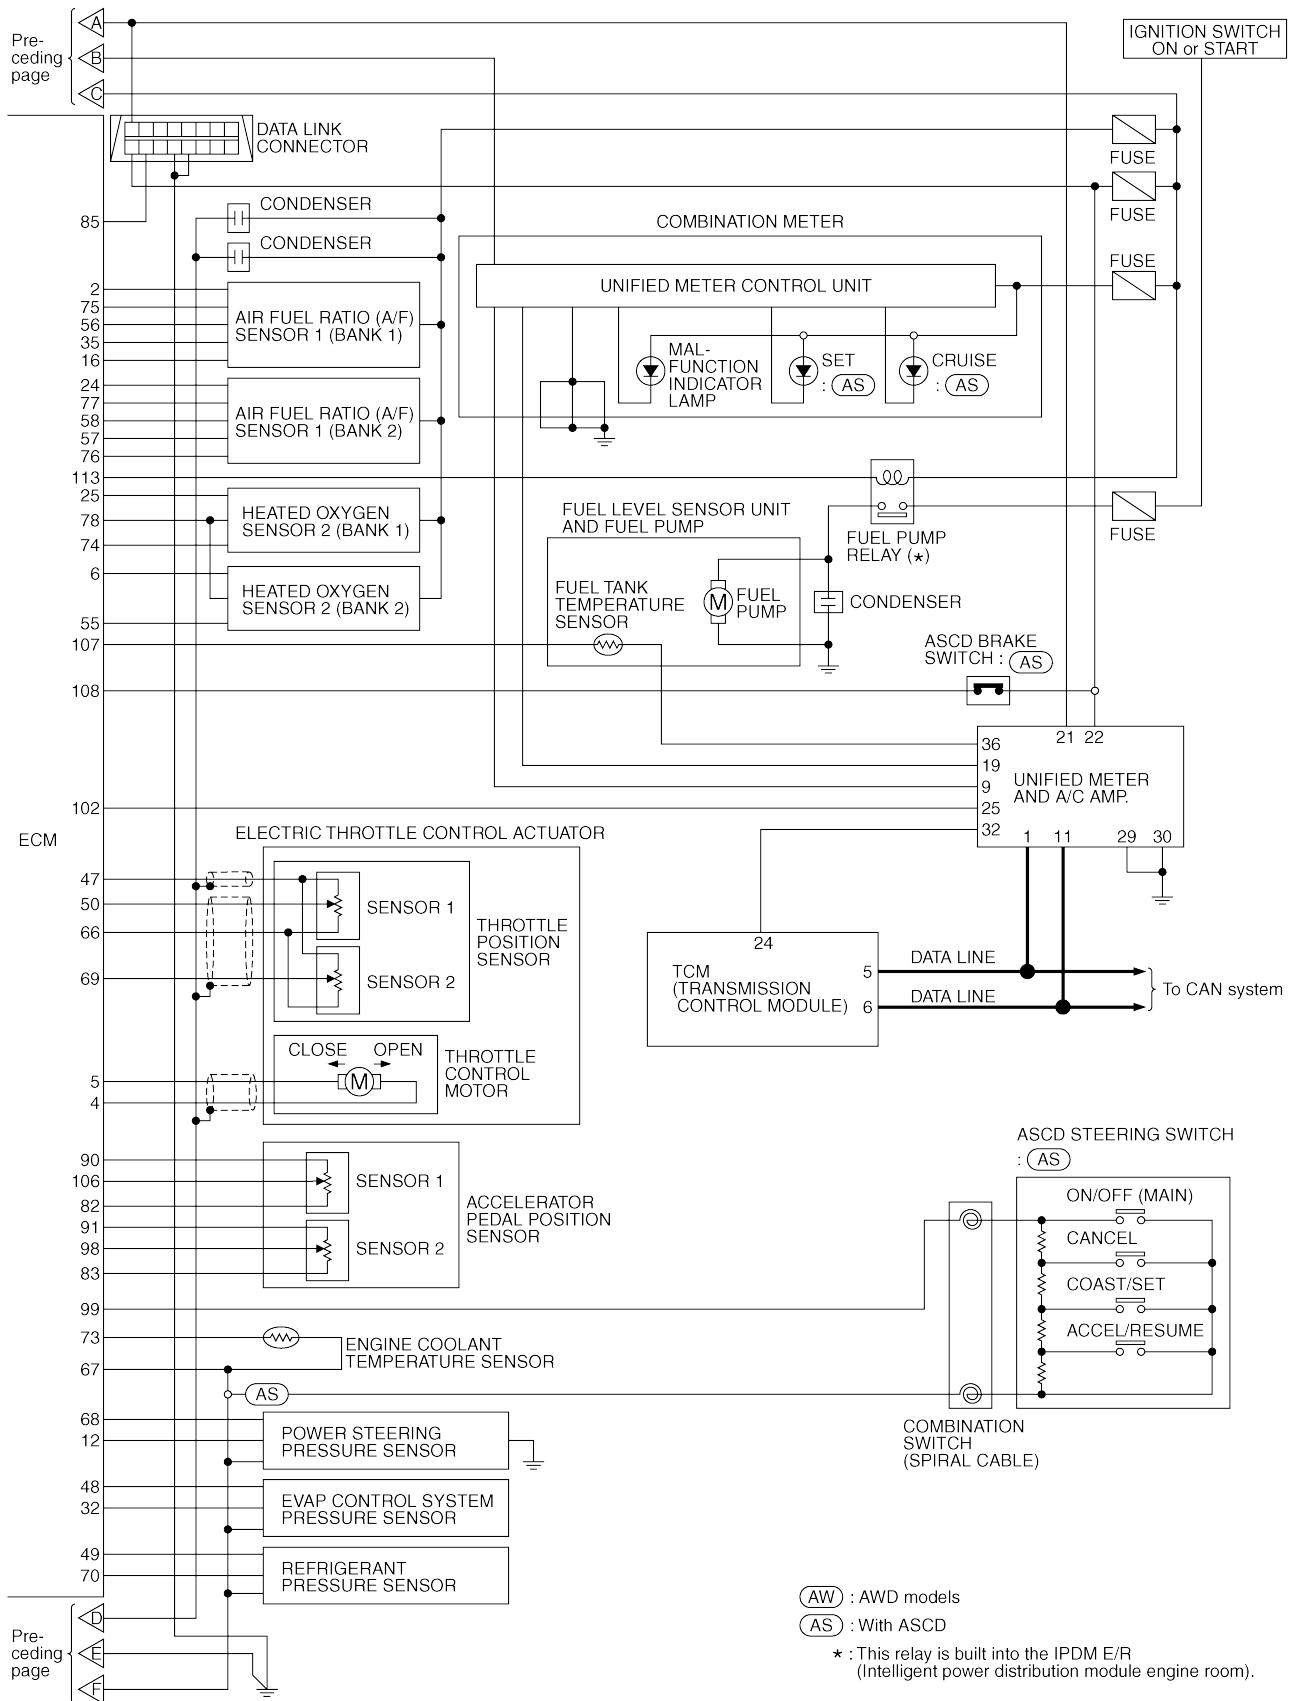


 

DTC P0122, P0123 TP SENSOR

Wiring Diagram

ABS004D2

EC-TPS2-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

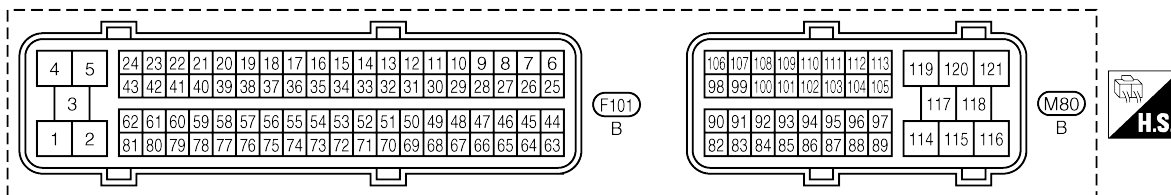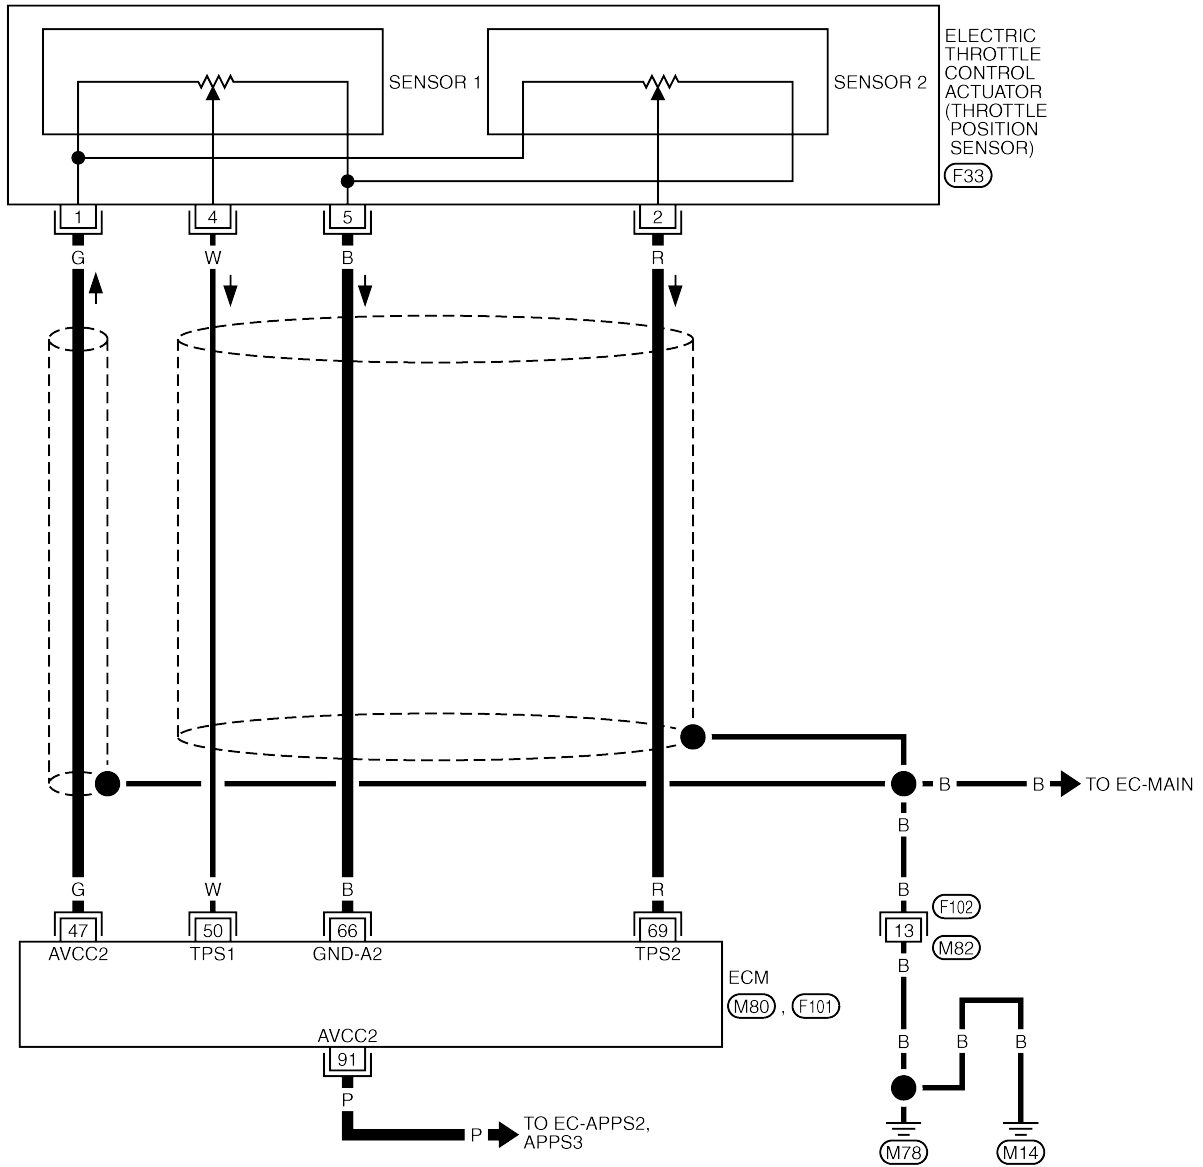

TBWA0699E

DTC P1122 ELECTRIC THROTTLE CONTROL FUNCTION

Wiring Diagram

ABS004JC

EC-ETC1-01

A

EC

C

D

E

F

G

H



I

J

K

L

M

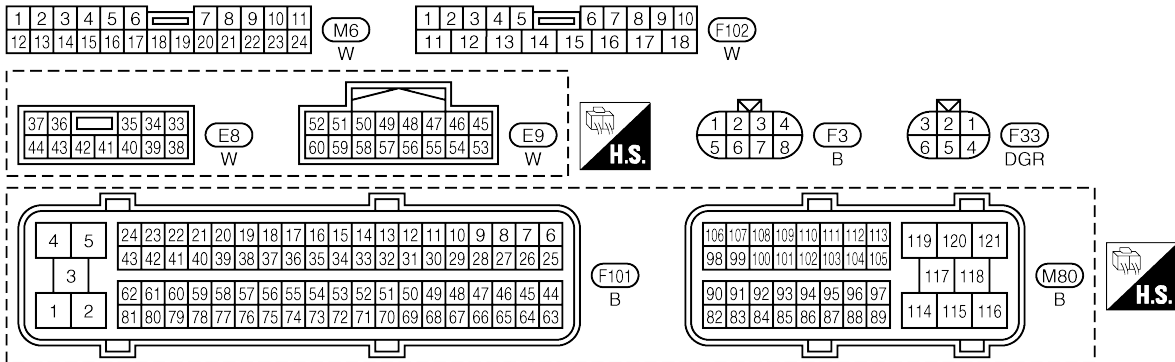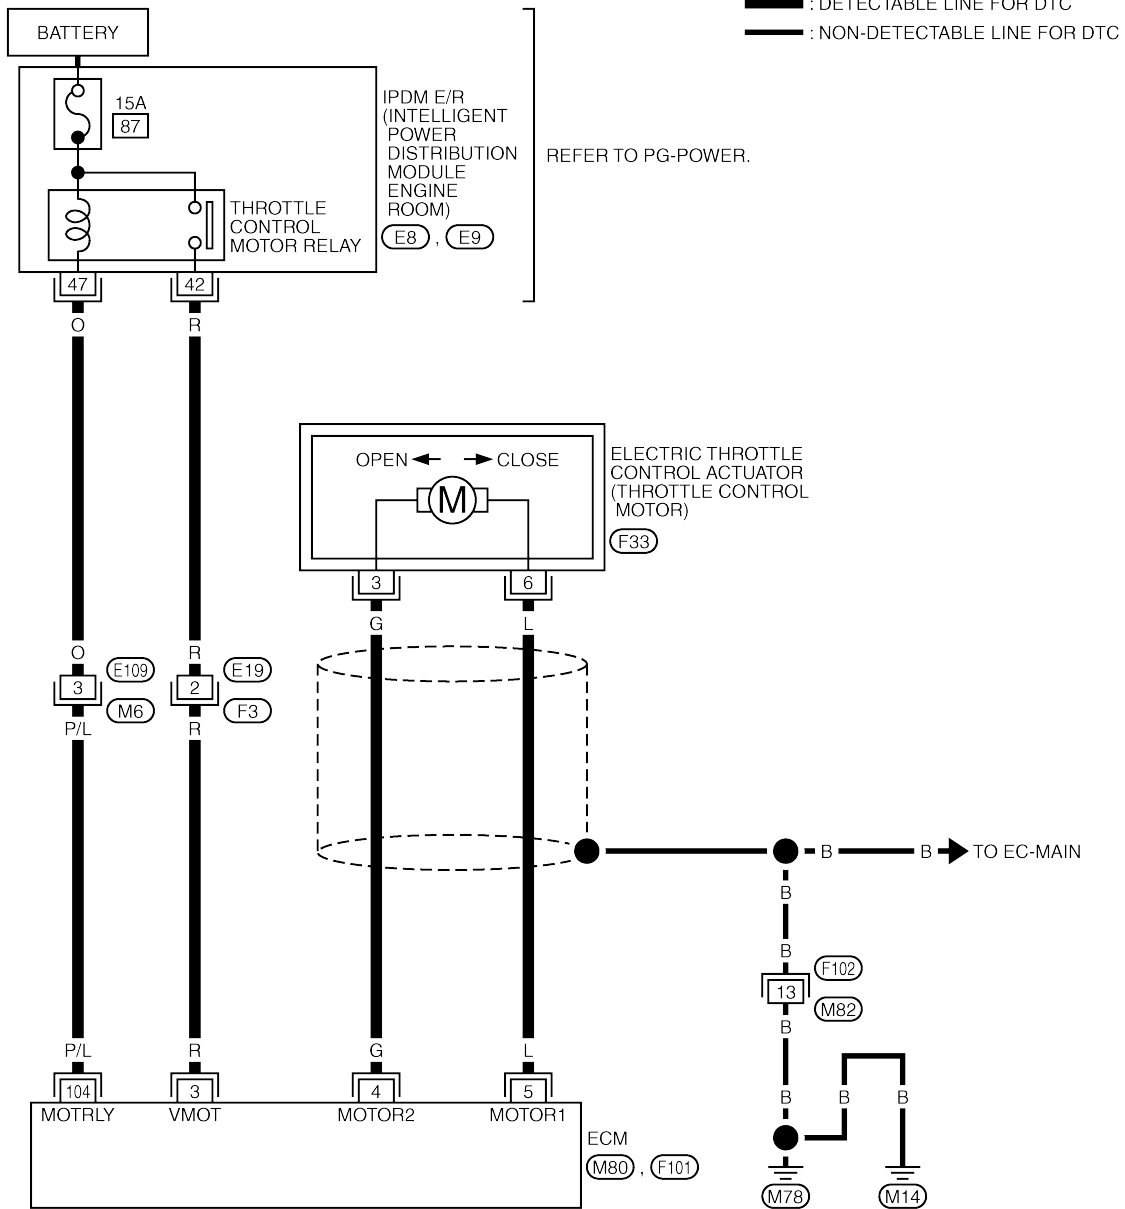

TBWA0709E



DTC P2122, P2123 APP SENSOR

Wiring Diagram

ABS004NH

EC-APPS1-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

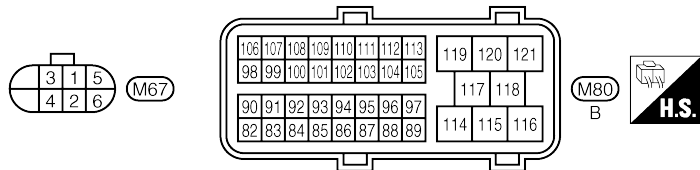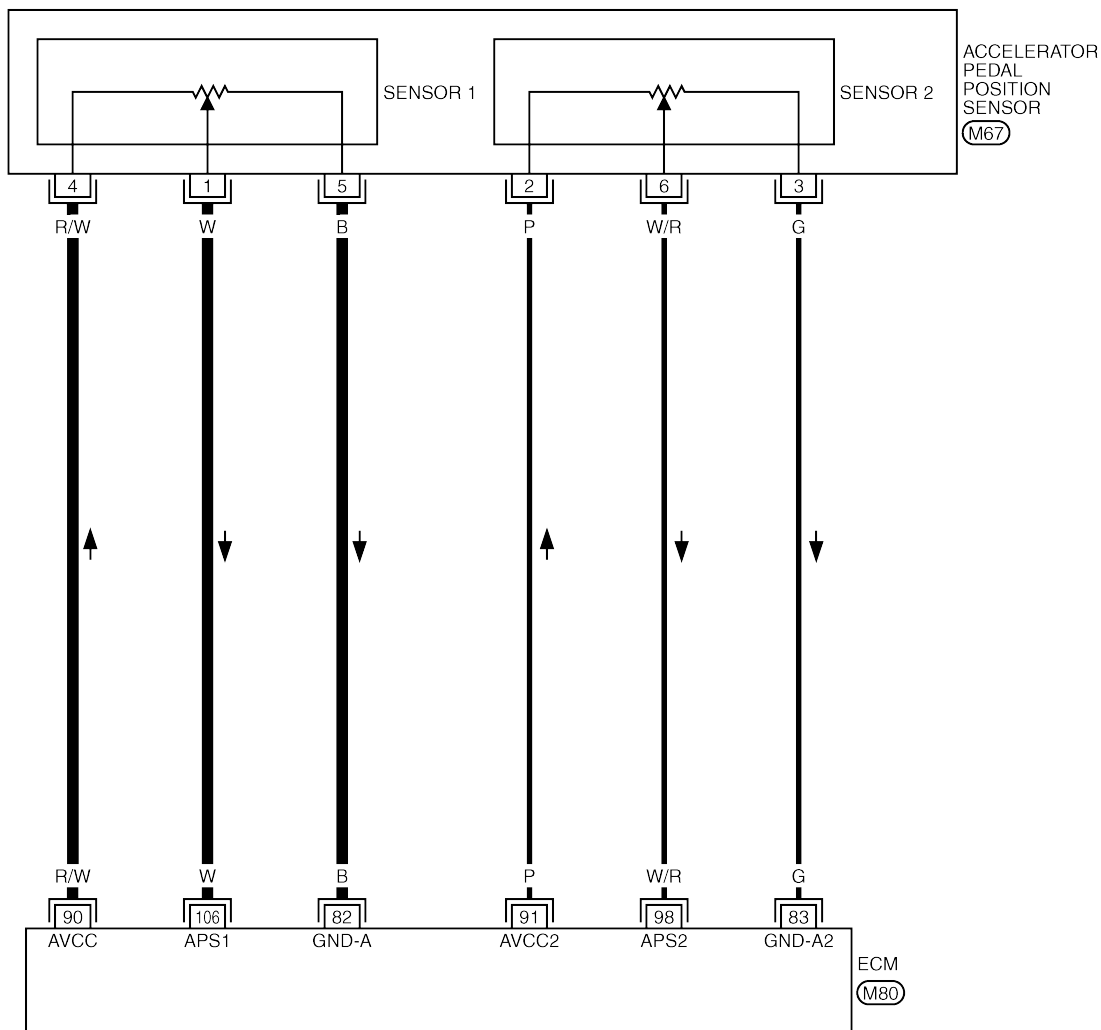

TBWA0717E