

Ignition Coil: Testing and Inspection

INSPECTION

Specified resistance:


[Secondary side]

Between (A) and (B)

12.8 k Ω ±15%

Between (C) and (D)

12.8 k Ω ±15%

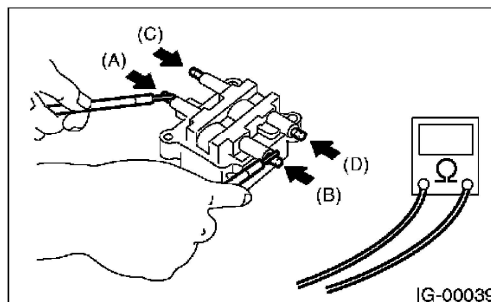

Using tester, inspect the following items, and replace if defective.

- Secondary coil resistance

CAUTION:

- If the resistance is extremely low, there is a short circuit.
- Ignitor is built-in the coil. Therefore, the resistance of the primary coil cannot be measured.