

Telephone:

Fax:

VAT Registration No.:

B138	Accelerator pedal position (APP) sensor
G1	Alternator
31	Battery -
30	Battery +
S13	Brake pedal position (BPP) switch
B132	Camshaft position (CMP) sensor
S258	Clutch pedal position (CPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
S79	Cruise control master switch
X1	Data link connector (DLC)
A130	Diagnostic module
A35	Engine control module (ECM)
B24	Engine coolant temperature (ECT) sensor
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
B72	Heated oxygen sensor (HO2S)
B72-I	Heated oxygen sensor (HO2S) 1
B72-II	Heated oxygen sensor (HO2S) 2
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B107	Intake manifold temperature sensor
B69	Knock sensor (KS)
B30	Mass air flow (MAF) sensor
A11	Multifunction control module
A11-I	Multifunction control module 1
P7	Tachometer
A177	Throttle control unit
M89	Throttle motor
B169	Throttle motor position sensor
VAN	Vehicle area network (data bus)
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

