


Battery Junction Box (BJB) (14A003)

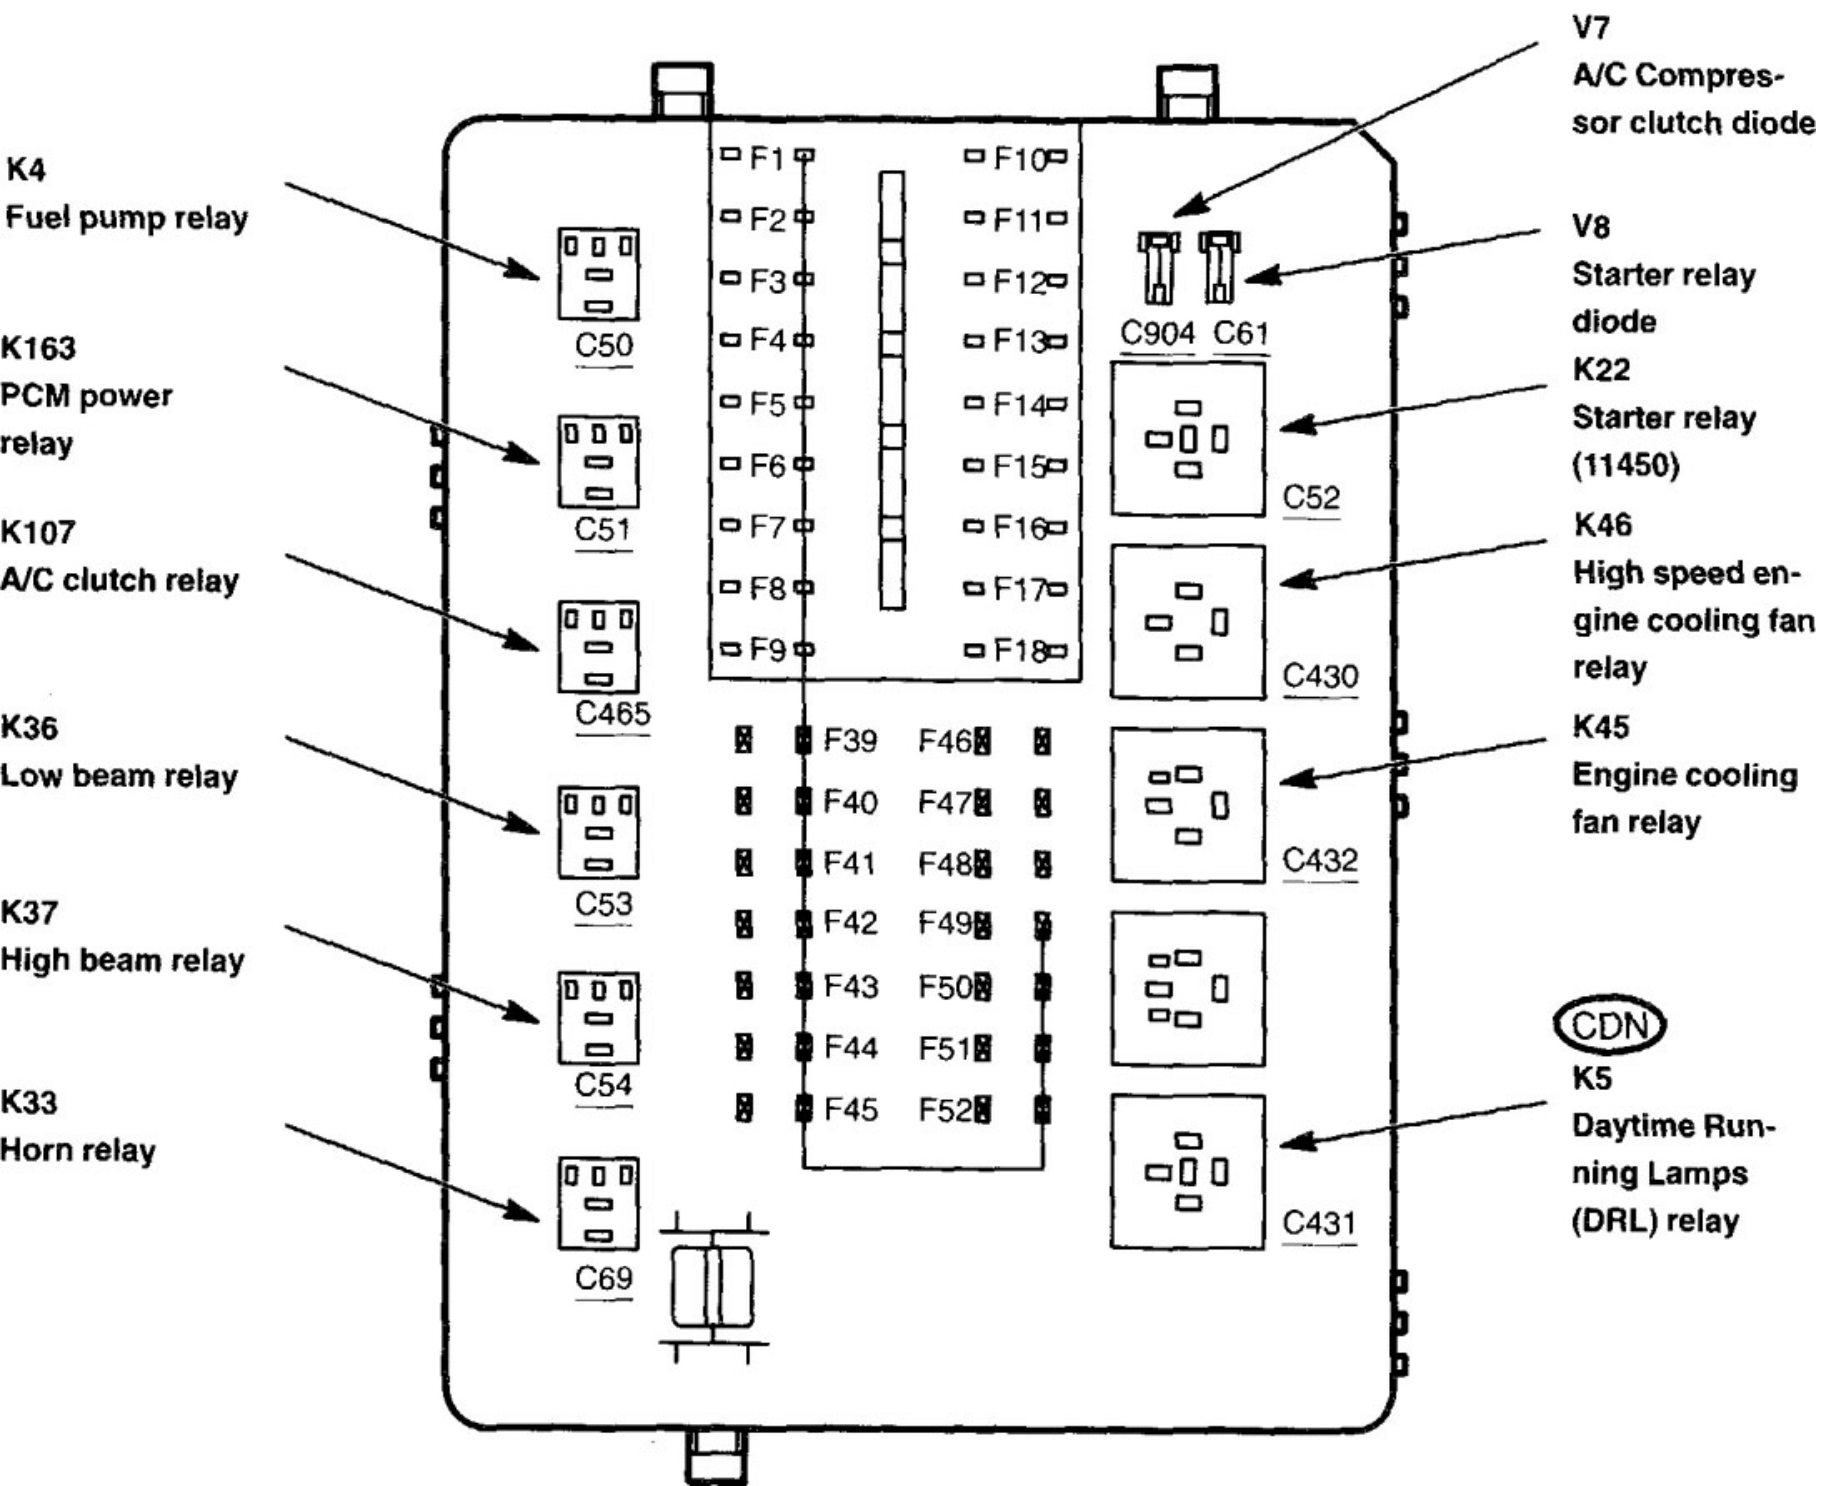

Battery Junction Box (BJB) (14A003)

Fuse	Amps	Circuits protected
1	--	not used
2	15	Generator
3	20	Fog lamp relay
4	--	not used
5	--	not used
6	3	PCM power relay
7	20	Horn relay, Multifunction switch, Anti-theft flasher relay
8	--	not used
9	15	Fuel pump relay
10	--	not used
11	20	Daytime Running Lamps (DRL) relay
12	--	not used
13	20	Heated Oxygen Sensor (HO2S) #11 (9G444), Heated Oxygen Sensor (HO2S), front, Heated Oxygen Sensor (HO2S) #21 (9G444), Heated Oxygen Sensor (HO2S) #12 (9F472), Heated Oxygen Sensor (HO2S), rear
14	--	not used
15	7.5	Headlamp, right (13008)
16	7.5	Headlamp, left (13008)
17	7.5	Headlamp, right (13008)
18	7.5	Headlamp, left (13008), Instrument cluster, Fog lamp relay
39	--	not used
40	20	Ignition switch (11572), Light switch, F26
41	20	PCM power relay
42	40	F37
43	--	not used
44	--	not used
45	60	Ignition relay
46	--	not used
47	--	not used
48	--	not used
49	60	Engine cooling fan relay, High speed engine cooling fan relay
50	--	not used
51	60	ABS control module (2C219)
52	60	Central Timer Module (CTM), Courtesy lamp relay, Rear window defrost relay, F25, F27, F28, F34, F36