

Vehicle > Power and Ground Distribution > Diagrams > Electrical (OE) > Power Distribution

8w-10-17 (4.0L)

FROM
C104
(8W-10-16)

C

F42
18
DG/LG

S126

F42
18
DG/LG

S153

F42
18
DG/LG

F42
18
DG/LG

F42
18
DG/LG

F42
18
DG/LG

2

**IGNITION
COIL
PACK**
(8W-30-13)

1

**FUEL
INJECTOR
NO. 5**
(8W-30-14)

1

**FUEL
INJECTOR
NO. 6**
(8W-30-14)

1

CAPACITOR
(8W-30-13)

S128

F42
18
DG/LG

F42
18
DG/LG

F42
18
DG/LG

F42
18
DG/LG

1

**FUEL
INJECTOR
NO. 1**
(8W-30-14)

1

**FUEL
INJECTOR
NO. 2**
(8W-30-14)

1

**FUEL
INJECTOR
NO. 3**
(8W-30-14)

1

**FUEL
INJECTOR
NO. 4**
(8W-30-14)

J038W-5

<https://my-alldata.dracar.la/repair/#/article/51749/component/1242/itype/21/nonstandard/1085855/isSelfReferenceLink/false>

Previous Diagram See: Power and Ground Distribution > Electrical > 8W-10-16

NOTE: Other diagrams referred to by number (8W-70-2, etc.) within these diagrams can be found at **Diagrams by Number**. See: Vehicle > Electrical > Diagrams By Number