(ATX)

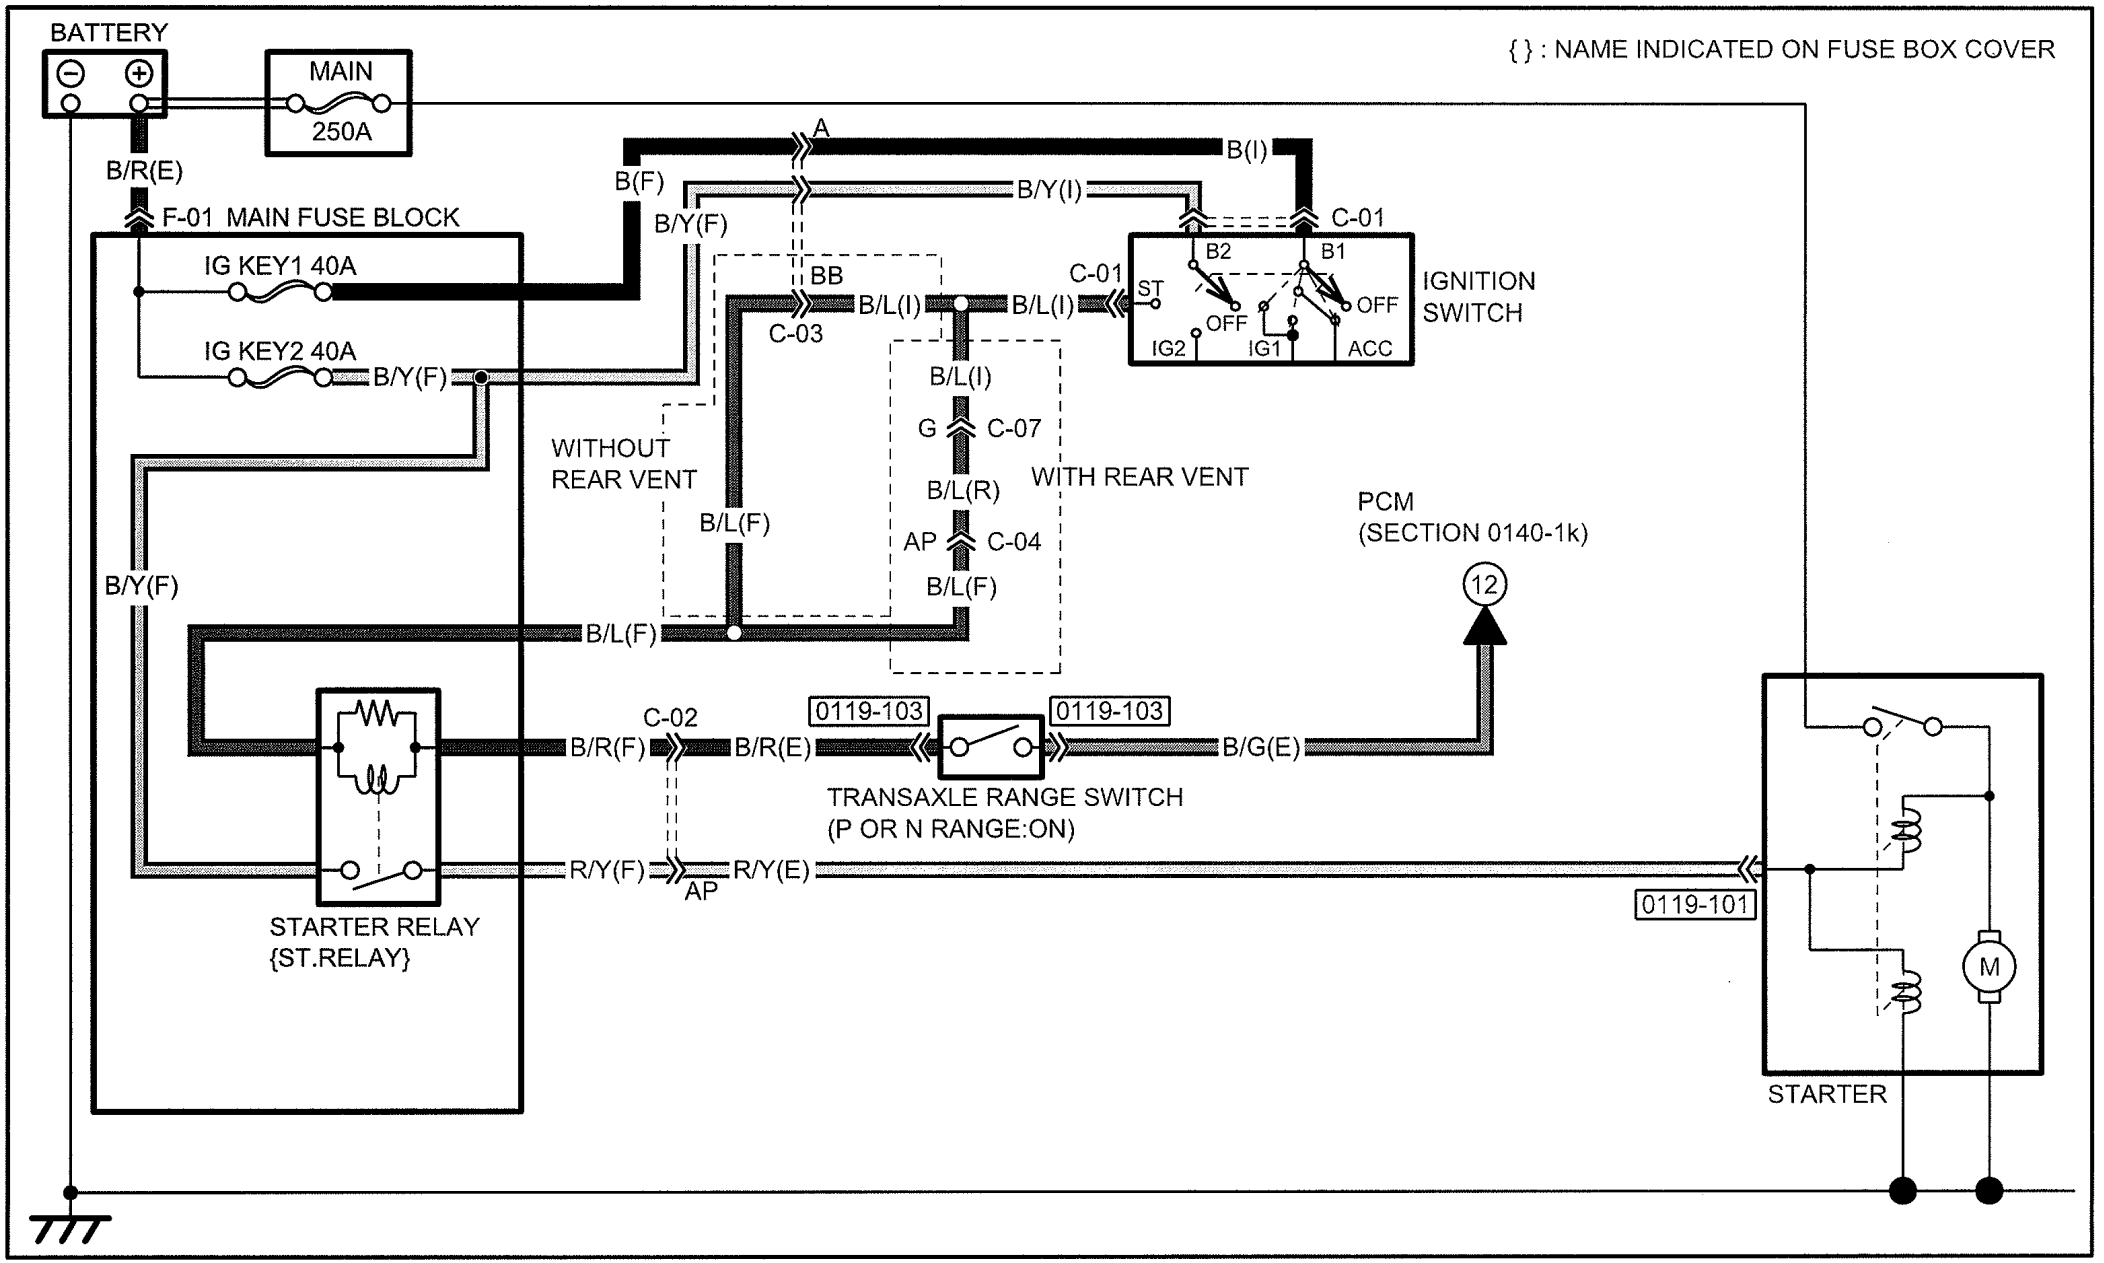
BATTERY
MAIN
250A
{ } : NAME INDICATED ON FUSE BOX COVER
B/R(E)
F-01 MAIN FUSE BLOCK
A
B(F)
B/Y(F)
B/Y(I)
B(I)
C-01
IG KEY1 40A
IG KEY2 40A
B/Y(F)
BB
C-03
B/L(I)
B/L(I)
C-01
ST
B2
B1
OFF
OFF
IG2
IG1
ACC
IGNITION SWITCH
WITHOUT REAR VENT
B/L(F)
B/L(I)
G
C-07
B/L(R)
AP
C-04
B/L(F)
WITH REAR VENT
PCM
(SECTION 0140-1k)
12
B/Y(F)
B/L(F)
C-02
B/R(F)
B/R(E)
0119-103
0119-103
B/G(E)
TRANSAXLE RANGE SWITCH
(P OR N RANGE:ON)
R/Y(F)
AP
R/Y(E)
0119-101
STARTER RELAY
{ST.RELAY}
M
STARTER