
- Z105 Luggage compartment, behind LH trim
- A11 Multifunction control module
- Z70 Steering column, LHD
- Z70 Steering column, LHD
- Z69 Steering column, RHD
- Z69 Steering column, RHD
- VAN Vehicle area network (data bus)

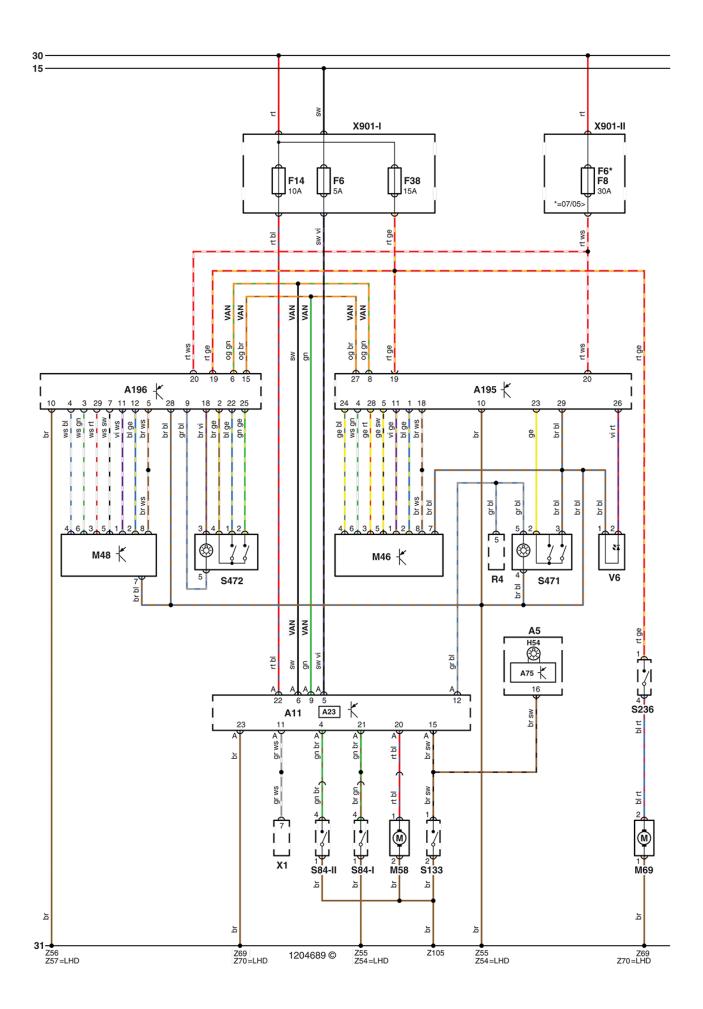

bl = blue	br = brown	dbl = dark blue
dgn = dark green	el = beige	ge = yellow
gn = green	gr = grey	nf = clear
og = orange	rs = pink	rt = red
sr = silver	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green
rbr = maroon	x = braided cable	y = high tension
z = non-cable connection		

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

©Copyright and database rights: Autodata Limited 1974-2018.