




# How to Check Your Rover's Catalyst is Working for a pre-MOT Check Using a Cheap OBD2 Bluetooth Dongle and the OBD Car Doctor Pro Android APP

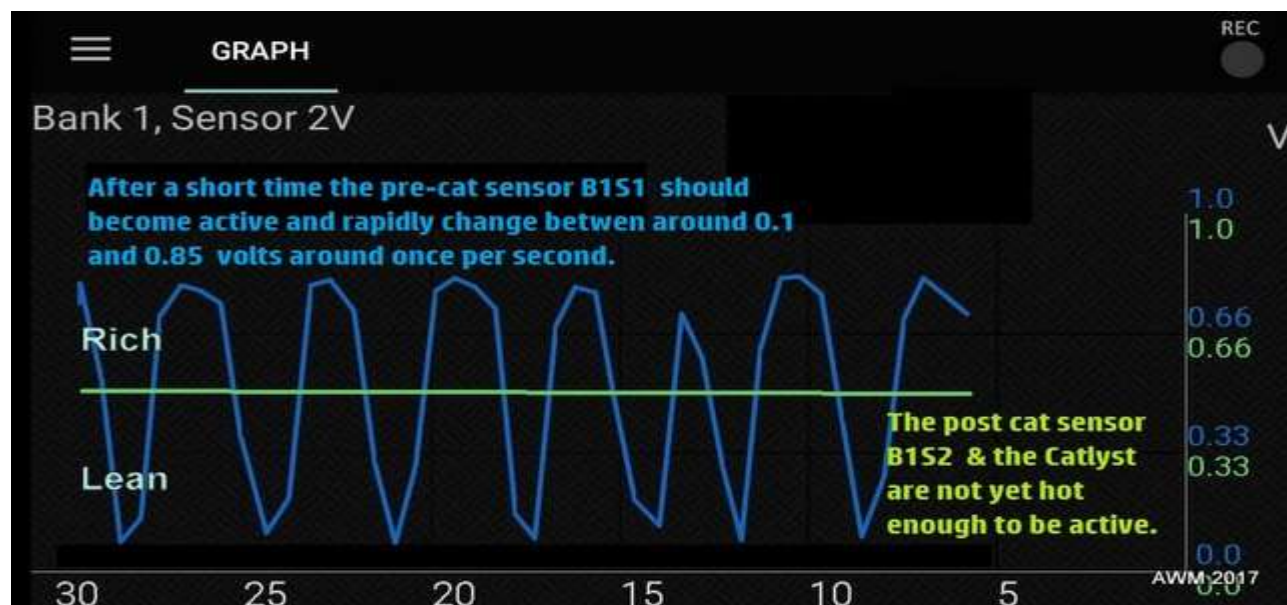

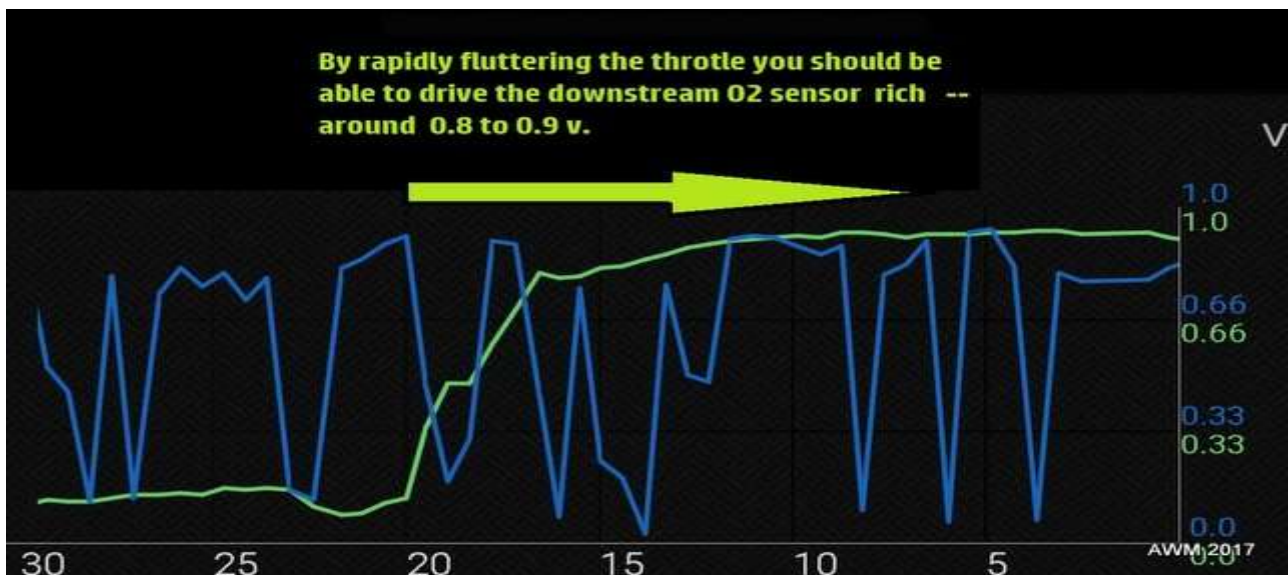

After throttle pedal is released and engine returns to idle speed after a short delay the downstream sensor returns to lean around 0.1 v

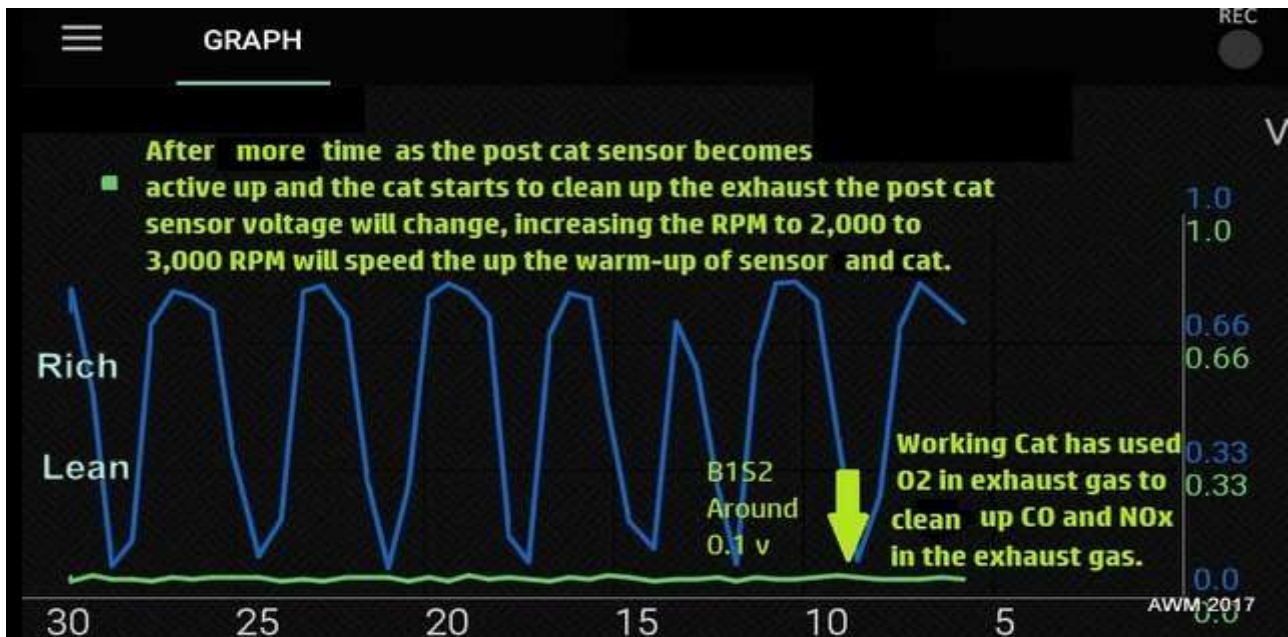