


FUSE & RELAY INFORMATIONS

PASSENGER COMPARTMENT JUNCTION BLOCK LAYOUT

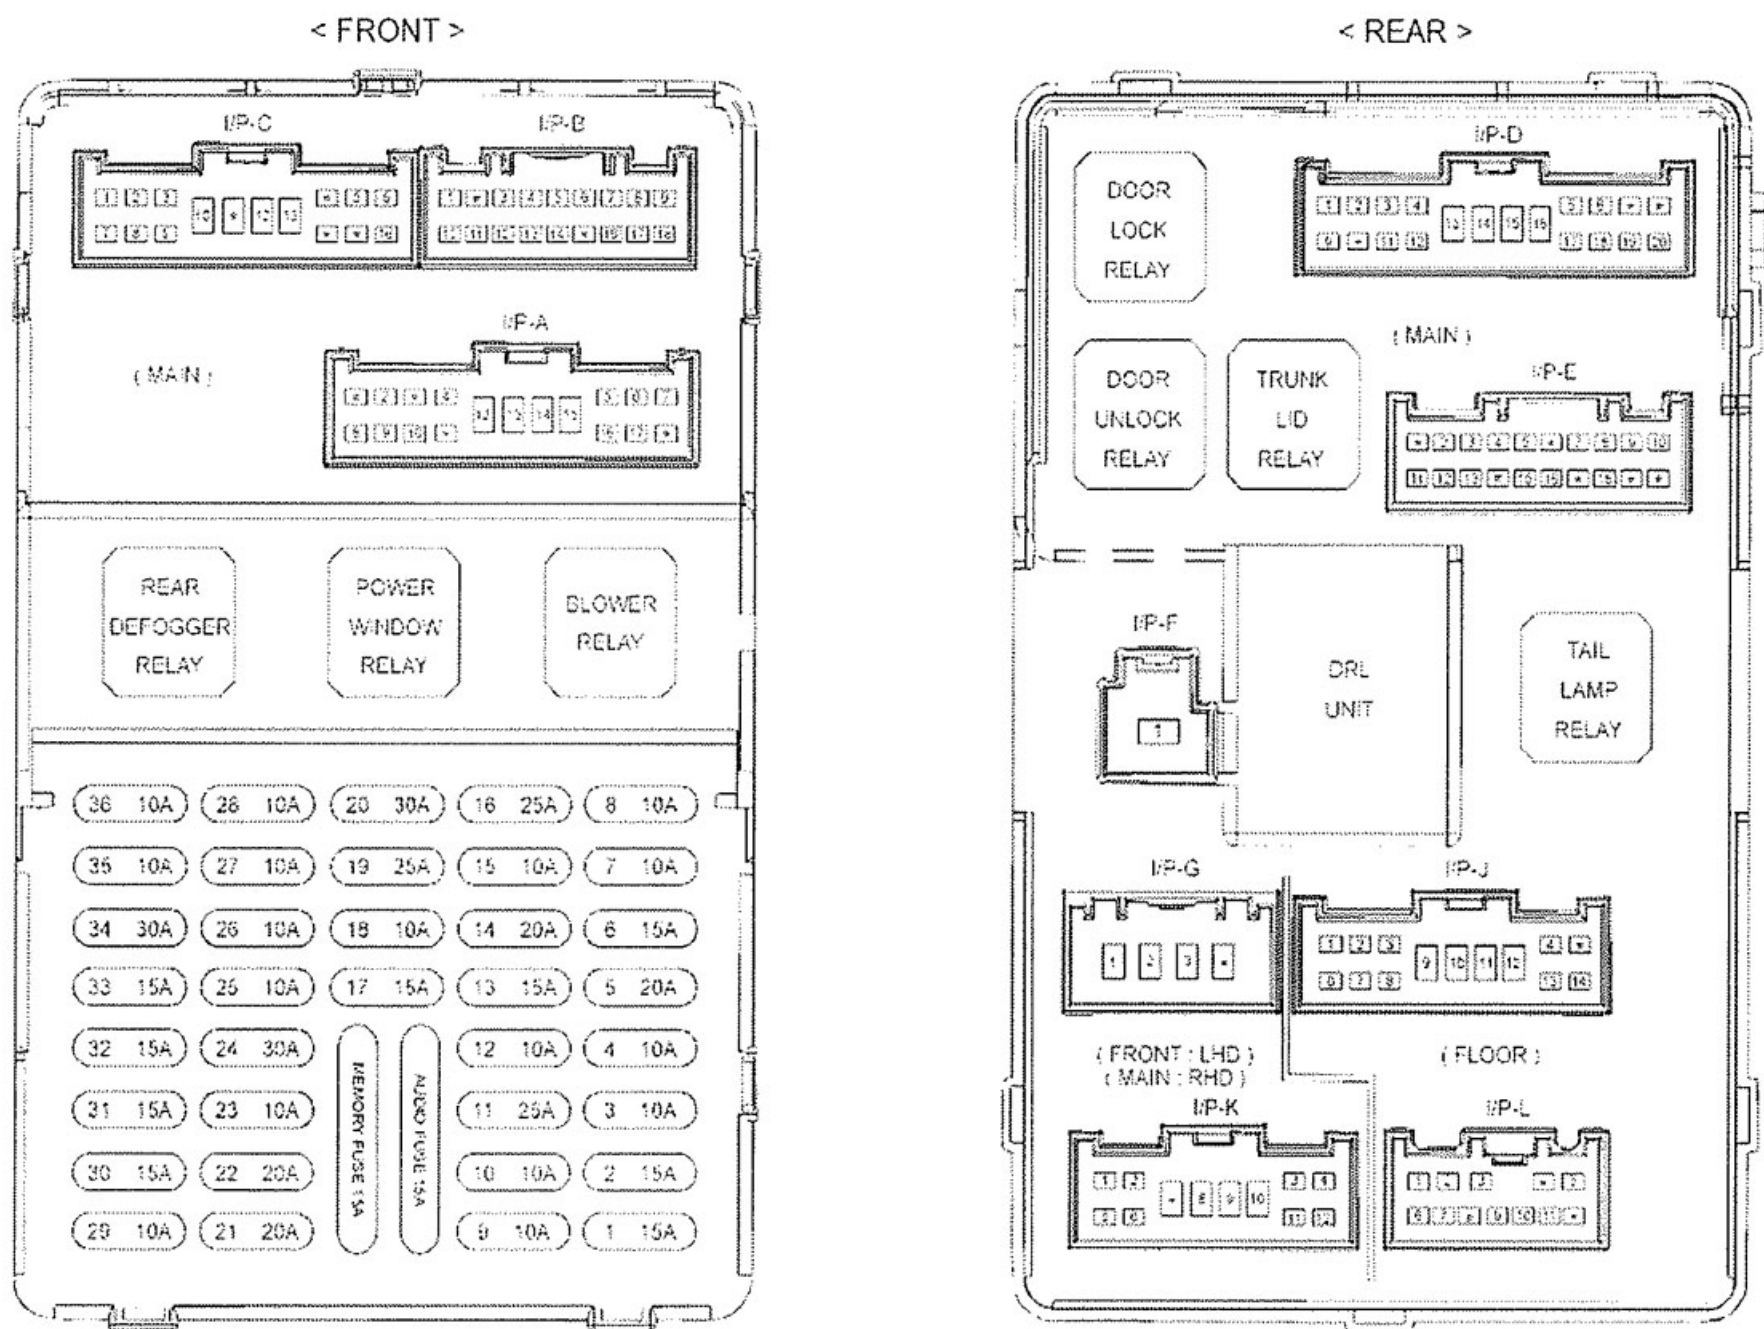

✘ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATIONS

CIRCUIT

FUSE		(A)	Circuit Protected
1	SPARE	15A	(SPARE)
2	S/HTR	15A	Seat warmer switch
3	ETACS	10A	BCM, Sunroof control module, Home link connector, RHEOSTAT
4	EPS	10A	Active incar & humidity sensor, Blower Relay
5	C/LIGHTER	20A	Cigarette lighter
6	SPARE	15A	(SPARE)
7	TAIL RH	10A	Illumination lamps, Right : License lamp, Rear combination lamp, Head lamp, Box lamp
8	TAIL LH	10A	Left : License lamp, Rear combination lamp, Head lamp
9	VAPS	10A	(SPARE)
10	H/LP	10A	DRL control module, Head lamp relay, AQS & ambient sensor
11	WIPER	25A	Wiper & washer
12	A/CON	10A	A/C control module
13	A/BAG	15A	SRS control module, Teiltale lamp, Passenger seat track position sensor
14	ACC SOCKET	20A	Front accessory socket, Rear power outlet
15	D/CLOCK	10A	Digital clock, Audio, ATM key lock control module, Power outside mirror switch, Top Box
16	SAFETY PWR	25A	Safety window module
17	ECS	15A	(SPARE)
18	ATM KEY LOCK	10A	ATM key lock control module, Tire pressure monitoring module
19	P/WDW LH	25A	Power window main switch, Left rear power window switch
20	P/WDW RH	30A	Power window main switch, Right Rear power window switch, Passenger power window switch
21	P/AMP	20A	Audio amp, JBL amp
22	DR LOCK	20A	Door lock/unlock relay
23	HAZARD	10A	Hazard switch, Hazard relay
24	P/SEAT RH	30A	(SPARE)
25	A/BAG IND	10A	Instrument cluster
26	T/SIG	10A	Hazard switch
27	CLUSTER	10A	BCM, Instrument cluster, Yaw rate sensor, ESC switch, Seat belt reminder indicator
28	AGCS	10A	(SPARE)
29	START	10A	Burglar alarm relay
30	PEDAL ADJ	15A	Adjustable pedal relay
31	ECS	15A	(SPARE)
32	T/LHD	15A	Trunk lid relay, Fuel filler door & trunk lid switch
33	SPARE	15A	(SPARE)
34	P/SEAT LH	30A	Power seat manual switch
35	SPORT MODE	10A	Sport mode switch, Key solenoid
36	MIRR HTD	10A	A/C control module, Outside mirror & mirror folding motor
POWER CONNECTOR	AUDIO	15A	Audio
	MEMORY	15A	BCM, Digital clock, Instrument cluster, A/C control module, Courtesy lamps

※ USE THE DESIGNATED FUSE ONLY