


P-Town Auto & Offroad, LLC

688 Harshaw Ave.
Patagonia, AZ 85624
(520) 394-0181 T

YMMS: 2013 Buick Regal Turbo Premium
Engine: 2.0L Eng
VIN:

Jul 28, 2024
License:
Odometer:

K9 Body Control Module X4

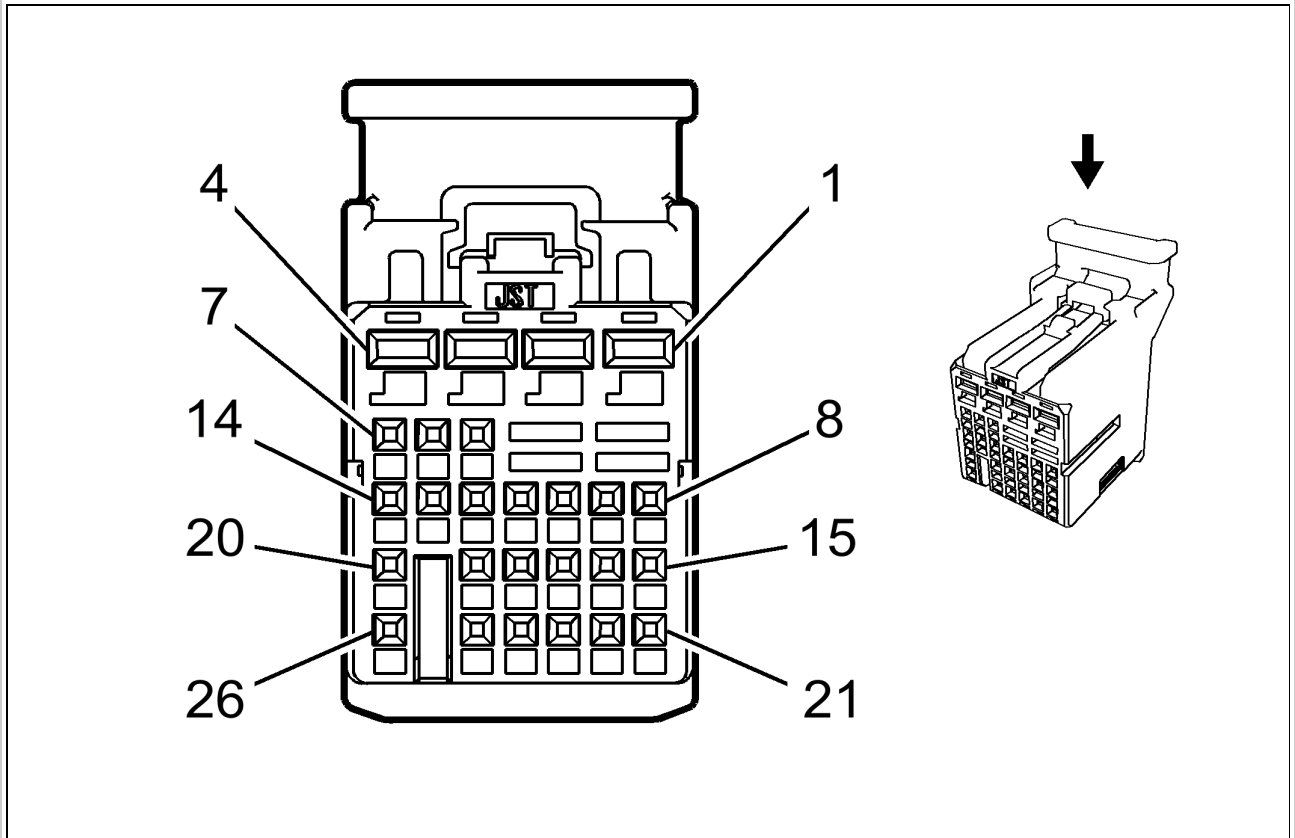

Connector Part Information

- Harness Type: Body
- OEM Connector: 13277341
- Service Connector: 13576640
- Description: 26-Way F 0.64, 2.8 Series (BK)

Terminal Part Information

Terminal Type ID	Terminated Lead	Diagnostic Test Probe	Terminal Removal	Service Terminal	Tray	Core Crimp	Insulation Crimp
------------------	-----------------	-----------------------	------------------	------------------	------	------------	------------------

			Tool				
I	13575560	J-35616-35 (VT)	J-38125-12A	SNAC- A061T-M2.8	20	E	A
II	13575870	J-35616-64B (L-BU)	J-38125-12A	SNAC3- A021T- M0.64	20	Pins: 5: Pending	Pins: 5: Pending

K9 Body Control Module X4

Pin	Size	Color	Circuit	Function	Terminal Type ID	Option
1	1.5	YE	312	Right Headlamp Low Beam Supply Voltage	I	T4A
2	1.5	YE	712	Left Headlamp Low Beam Supply Voltage	I	T4A
3	0.75 0.75	GN/VT D-GN/VT	1315 1315	Right Front Turn Signal Lamp Supply Voltage Right Front Turn Signal Lamp Supply Voltage	I	except CZ2 CZ2
4	0.75 0.75	BU/VT D-BU/VT	1335 1335	Right Rear Turn Signal Lamp Supply Voltage Right Rear Turn Signal Lamp Supply Voltage	I	except CZ2 CZ2
5	0.5	GY/BN	309	Right Park Lamp Supply Voltage	II	-
6	0.5	VT/GY	709	Left Park Lamp Supply Voltage	II	-
7	0.5	GY/YE	7542	Left Rear Stop Lamp Supply Voltage	II	CZ2
8-10	-	-	-	Not Occupied	-	-
11	0.5	VT/WH	5065	Stop Lamp Relay Coil Supply Voltage	II	-
12	0.5 0.5	GY/VT VT/YE	755 43	RAP Relay Coil Control Ignition Voltage	II	except CZ2 CZ2
13	0.5 0.5	GN/YE D- GN/YE	6846 6846	Rear License Lamp Supply Voltage Rear License Lamp Supply Voltage	II	except CZ2 CZ2
14	0.5	BN/GY	2268	Windshield Washer Relay Control	II	-
15	0.5 0.5	GN/VT BN/VT	5199 1594	Run/Crank Relay Coil Control Ignition 3 Relay Control	II	except CZ2 CZ2
16	0.5	GY	91	Windshield Wiper Motor Relay Coil Supply Voltage	II	-
17	0.5	BN/GN	196	Windshield Wiper Motor Park Switch Signal	II	-
18	0.5	WH/YE	5075	Current Sensor Signal	II	-

19	-	-	-	Not Occupied	-	-
20	0.5	RD/YE	1442	Battery Positive Voltage	II	-
21	0.5	D-BU/VT	5076	Current Sensor Supply Voltage	II	except CZ2
21	0.5	RD/BU	5076	Current Sensor Supply Voltage	II	CZ2
22	0.5 0.5	VT/YE D-GN/VT	5985 206	Accessory Wakeup Serial Data Accessory/Run/Crank Ignition 0 Voltage	II	except CZ2 CZ2
23	0.5 0.5	WH/D-BU WH/BU	5986 5986	Serial Data Communication Enable Serial Data Communication Enable	II	except CZ2 CZ2
24	0.5 0.5	BN/L-GN BN/GN	109 109	Hood Ajar Switch Signal Hood Ajar Switch Signal	II	except CZ2 CZ2
25	-	-	-	Not Occupied	-	-
26	0.5 0.5	BK BK	150 50	Ground Ground	II	except CZ2 CZ2

"If your car is beat down, bring it to P-Town!"